

Embedded & Realtime Operating Systems


Peter Marwedel TU Dortmund, Informatik 12 Germany

2009/11/27




© These slides use Microsoft cliparts. All Microsoft restrictions apply.

Structure of this course

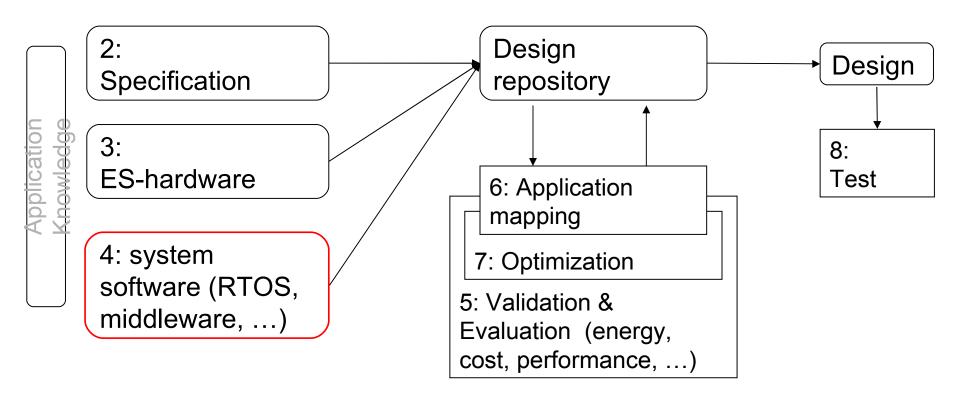

Numbers denote sequence of chapters





Reuse of standard software components

Knowledge from previous designs to be made available in the form of **intellectual property** (IP, for SW & HW).



- Operating systems
- Middleware
- **.**



Embedded operating systems

- Requirement: Configurability -

Configurability


No single RTOS will fit all needs, no overhead for unused functions tolerated roonfigurability needed.

- simplest form: remove unused functions (by linker?).
- Conditional compilation (using #if and #ifdef commands).
- Dynamic data might be replaced by static data.
- Advanced compile-time evaluation useful.
- Object-orientation could lead to a derivation subclasses.



http://www.windriver.com/products/development_tools/ide/tornado2/tornado_2_ds.pdf

Example: Configuration of VxWorks

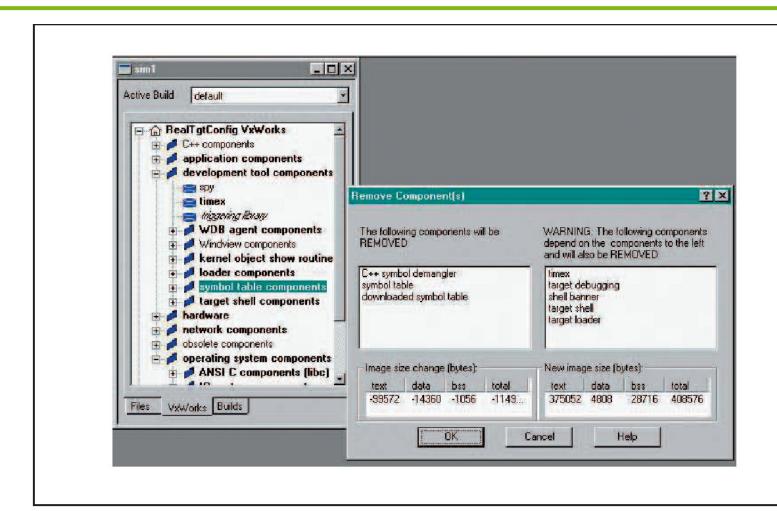

Automatic dependency analysis and size calculations allow users to quickly custom-tailor the VxWORKS operating system.





Verification of derived OS?

Verification a potential problem of systems with a large number of derived OSs:



- Each derived OS must be tested thoroughly;
- potential problem for eCos (open source RTOS from Red Hat), including 100 to 200 configuration points [Takada, 01].



Embedded operating systems -Requirement: Disc and network handled by tasks-


- Disc & network handled by tasks instead of integrated drivers. Relatively slow discs & networks can be handled by tasks.
- Many ES without disc, a keyboard, a screen or a mouse.
- Effectively no device that needs to be supported by all versions of the OS, except maybe the system timer.

Embedded OS

application software
middleware middleware
device driver device driver
kernel


Standard OS

application software
middleware middleware
operating system
device driver device driver





Example: WindRiver Platform Industrial Automation

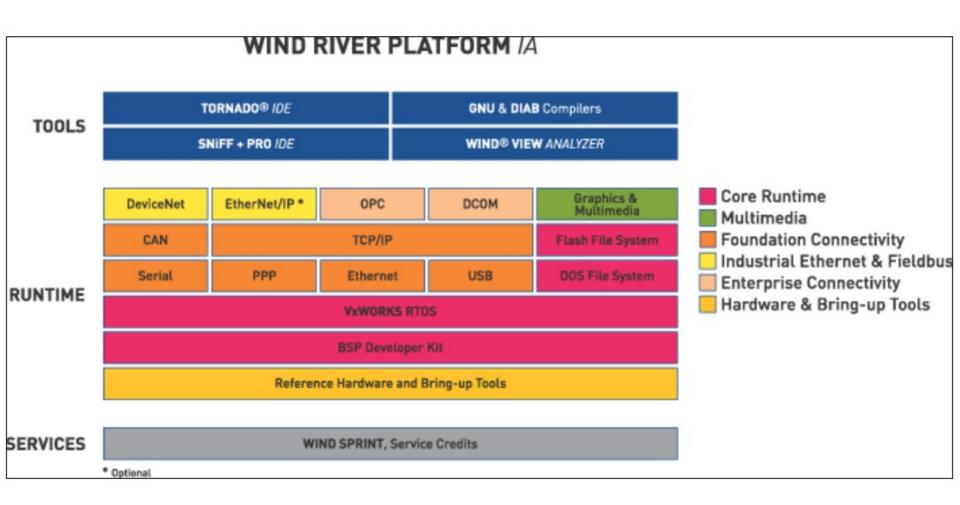






Embedded operating systems

- Requirement: Protection is optional-


Protection mechanisms not always necessary:

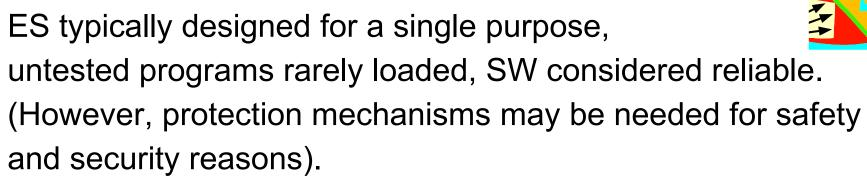

Privileged I/O instructions not necessary and tasks can do their own I/O.

Example: Let switch be the address of some switch Simply use

load register, switch instead of OS call.






Embedded operating systems

- Requirement: Interrupts not restricted to OS -

Interrupts can be employed by any process

For standard OS: serious source of unreliability. Since


- embedded programs can be considered to be tested,
- since protection is not necessary and
- since efficient control over a variety of devices is required,
- it is possible to let interrupts directly start or stop tasks (by storing the tasks start address in the interrupt table).
- More efficient than going through OS services.
- Reduced composability: if a task is connected to an interrupt, it may be difficult to add another task which also needs to be started by an event.





- Requirement: Real-time capability-

Many embedded systems are real-time (RT) systems and, hence, the OS used in these systems must be **real-time operating systems (RTOSes)**.





Real-time operating systems - Real-time OS (1) -

Def.: (A) real-time operating system is an operating system that supports the construction of real-time systems

The following are the three key requirements

1. The timing behavior of the OS must be predictable.

∀ services of the OS: Upper bound on the execution time! RTOSs must be deterministic:

- unlike standard Java,
- short times during which interrupts are disabled,
- contiguous files to avoid unpredictable head movements.

[Takada, 2001]



Real-time operating systems - Real-time OS (2) -

2. OS must manage the timing and scheduling

- OS possibly has to be aware of task deadlines; (unless scheduling is done off-line).
- OS must provide precise time services with high resolution.

[Takada, 2001]



Time services

Time plays a central role in "real-time" systems.

Actual time is described by real numbers.

Two discrete standards are used in real-time equipment:

International atomic time TAI (french: temps atomic internationale) Free of any artificial artifacts.




Universal Time Coordinated (UTC)
 UTC is defined by astronomical standards

UTC and TAI identical on Jan. 1st, 1958.

30 seconds had to be added since then.

Not without problems: New Year may start twice per night.





Internal synchronization

Synchronization with one master clock

Typically used in startup-phases

Distributed synchronization:

- 1. Collect information from neighbors
- 2. Compute correction value
- 3. Set correction value.



Application level: ~500 µs to 5 ms

Operation system kernel: 10 µs to 100 µs

Communication hardware: < 10 µs






Byzantine Error

Erroneous local clocks can have an impact on the computed local time.

Advanced algorithms are fault-tolerant with respect to Byzantine errors. Excluding k erroneous clocks is possible with 3k+1 clocks (largest and smallest values will be excluded.

Many publications in this area.

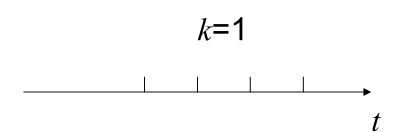



External synchronization

External synchronization guarantees consistency with actual physical time.

Trend is to use GPS for ext. synchronization GPS offers TAI and UTC time information. Resolution is about 100 ns.







Problems with external synchronization

Problematic from the perspective of fault tolerance:

Erroneous values are copied to all stations.

Consequence: Accepting only small changes to local time.

Many time formats too restricted;

e.g.: NTP protocol includes only years up to 2036

Full seconds, UTC, 4 bytes				Binar	Binary fraction of second, 4 b				

Range up the years 2036; 136 year wrap around cycle

For time services and global synchronization of clocks synchronization see Kopetz, 1997.





Real-time operating systems - Real-time OS (3) -

3. The OS must be fast

Practically important.



[Takada, 2001]



RTOS-Kernels

Distinction between

real-time kernels and modified kernels of standard OSes.

application software							
middleware	middleware						
device driver		device driver					
real-time kernel							

application software						
middleware	middleware					
operating system						
device driver	device driver					

Distinction between

- general RTOSes and RTOSes for specific domains,
- standard APIs (e.g. POSIX RT-Extension of Unix, ITRON, OSEK) or proprietary APIs.



Functionality of RTOS-Kernels

Includes

- processor management,
- memory management,
- and timer management;
- task management (resume, wait etc),
- inter-task communication and synchronization.



resource management

Classes of RTOSes according to R. Gupta 1. Fast proprietary kernels

Fast proprietary kernels

For complex systems, these kernels are inadequate, because they are designed to be fast, rather than to be predictable in every respect

[R. Gupta, UCI/UCSD]

Examples include QNX, PDOS, VCOS, VTRX32, VxWORKS.




Classes of RTOSes according to R. Gupta 2. Real-time extensions to standard OSs

Real-time extensions to standard OSes:

Attempt to exploit comfortable main stream OSes.

RT-kernel running all RT-tasks.

Standard-OS executed as one task.

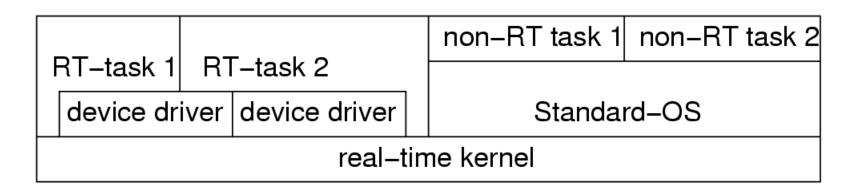


- + Crash of standard-OS does not affect RT-tasks;
- RT-tasks cannot use Standard-OS services;
 less comfortable than expected






Example: RT-Linux

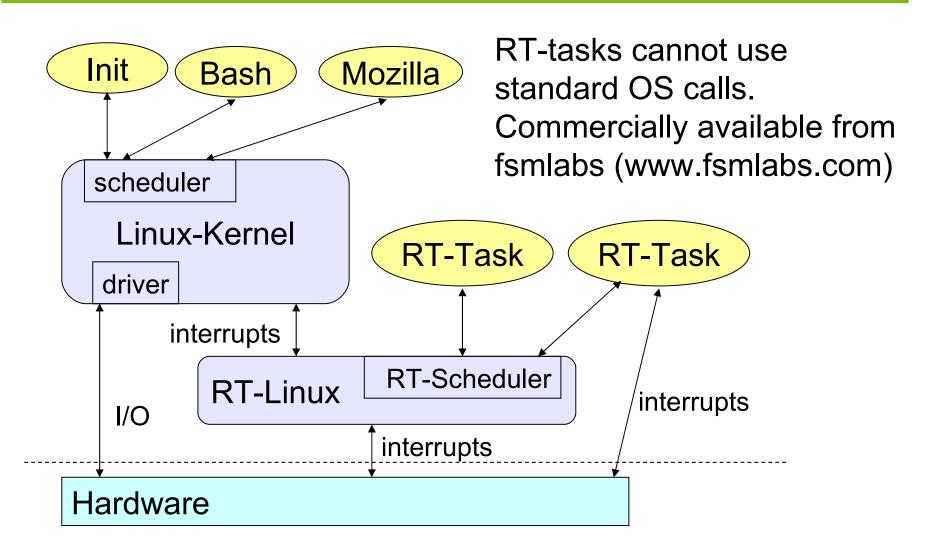

Example: Posix 1.b RT-extensions to Linux

Standard scheduler can be replaced by POSIX scheduler implementing priorities for RT tasks

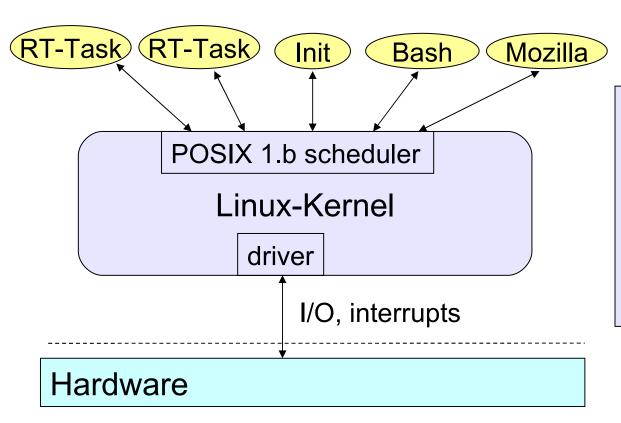

Special RT-calls and standard OS calls available.
Easy programming, no guarantee for meeting deadline



Evaluation (Gupta)

According to Gupta, trying to use a version of a standard OS:

not the correct approach because too many basic and inappropriate underlying assumptions still exist such as optimizing for the average case (rather than the worst case), ... ignoring most if not all semantic information, and independent CPU scheduling and resource allocation.

Dependences between tasks not frequent for most applications of std. OSs & therefore frequently ignored. Situation different for ES since dependences between tasks are quite common.



Market

Classes of RTOSes according to R. Gupta 3. Research systems trying to avoid limitations

Research systems trying to avoid limitations.


Include MARS, Spring, MARUTI, Arts, Hartos, DARK, and Melody

Research issues [Takada, 2001]:

- low overhead memory protection,
- temporal protection of computing resources
- RTOSes for on-chip multiprocessors
- support for continuous media
- quality of service (QoS) control.

Competition between

- traditional vendors (e.g. Wind River Systems) and
- Embedded Windows XP and Windows CE







Virtual machines

- Emulate several processors on a single real processor
- Running
 - As Single process (Java virtual machine)
 - On bare hardware
 - Allows several operating systems to be executed on top
 - Very good shielding between applications
- Temporal behavior








Resource Access Protocols

Peter Marwedel Informatik 12 TU Dortmund Germany



Resource access protocols

Critical sections: sections of code at which exclusive access to some resource must be guaranteed. Can be guaranteed with semaphores S or "mutexes".

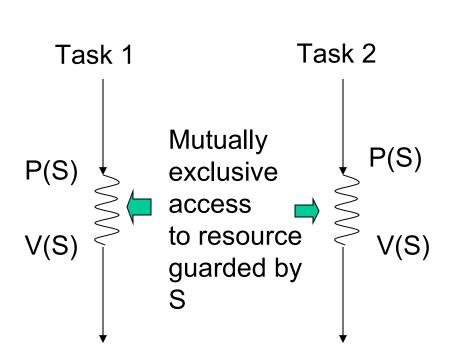


P(S) checks semaphore to see if resource is available and if yes, sets S to "used". Uninterruptible operations! If no, calling task has to wait.

V(S): sets S to "unused" and starts sleeping task (if any).



Blocking due to mutual exclusion

Priority T_1 assumed to be > than priority of T_2 . If T_2 requests exclusive access first (at t_0), T_1 has to wait until T_2 releases the resource (time t_3), thus inverting the priority:

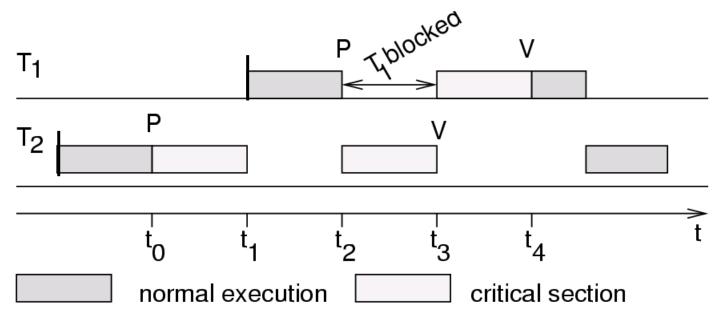

In this example: blocking is bounded by length of critical section of T₂.






Blocking with >2 tasks can exceed the length of any critical section

Priority of T1 > priority of T2 > priority of T3.

T2 preempts T3:

T2 can prevent T3 from releasing the resource.

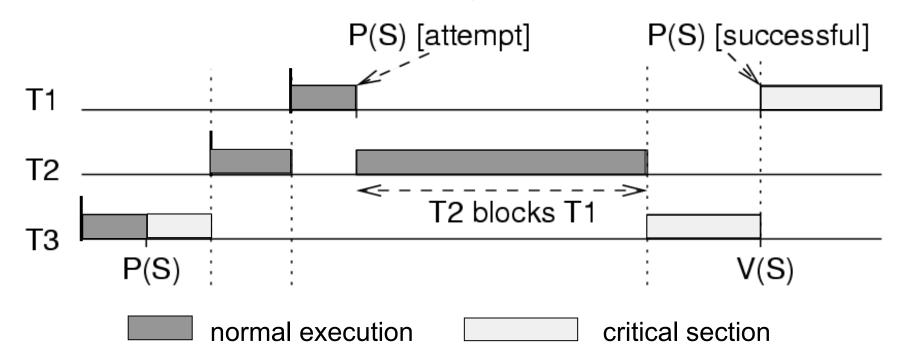


Priority inversion!






Solutions

Disallow preemption during the execution of all critical sections. Simple, but creates unnecessary blocking as unrelated tasks may be blocked.



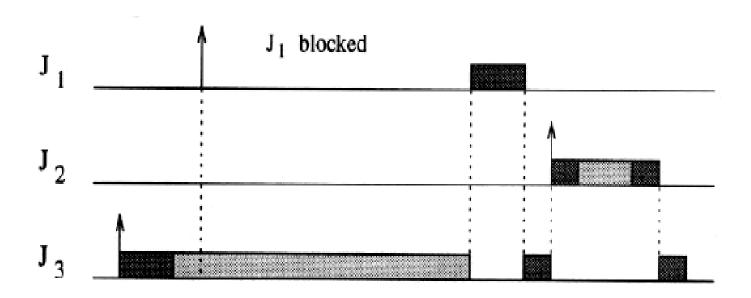

The MARS Pathfinder problem (1)

"But a few days into the mission, not long after Pathfinder started gathering meteorological data, the spacecraft began experiencing total system resets, each resulting in losses of data. The press reported these failures in terms such as "software glitches" and "the computer was trying to do too many things at once"." ...





The MARS Pathfinder problem (2)

"VxWorks provides preemptive priority scheduling of threads. Tasks on the Pathfinder spacecraft were executed as threads with priorities that were assigned in the usual manner reflecting the relative urgency of these tasks."

"Pathfinder contained an "information bus", which you can think of as a shared memory area used for passing information between different components of the spacecraft."

A bus management task ran frequently with high priority to move certain kinds of data in and out of the information bus. Access to the bus was synchronized with mutual exclusion locks (mutexes)."



The MARS Pathfinder problem (3)


- The meteorological data gathering task ran as an infrequent, low priority thread, ... When publishing its data, it would acquire a mutex, do writes to the bus, and release the mutex. ..
- The spacecraft also contained a communications task that ran with medium priority."

(B)

High priority: retrieval of data from shared memory

Medium priority: communications task


Low priority: thread collecting meteorological data





The MARS Pathfinder problem (4)

"Most of the time this combination worked fine. However, very infrequently it was possible for an interrupt to occur that caused the (medium priority) communications task to be scheduled during the short interval while the (high priority) information bus thread was blocked waiting for the (low priority) meteorological data thread. In this case, the long-running communications task, having higher priority than the meteorological task, would prevent it from running, consequently preventing the blocked information bus task from running. After some time had passed, a watchdog timer would go off, notice that the data bus task had not been executed for some time, conclude that something had gone drastically wrong, and initiate a total system reset. This scenario is a classic case of priority inversion."






Coping with priority inversion: the priority inheritance protocol

- Tasks are scheduled according to their active priorities.
 Tasks with the same priorities are scheduled FCFS.
- If task T1 executes P(S) & exclusive access granted to T2: T1 will become blocked.
 If priority(T2) < priority(T1): T2 inherits the priority of T1.
 T2 resumes.

Rule: tasks inherit the highest priority of tasks blocked by it.


- When T2 executes V(S), its priority is decreased to the highest priority of the tasks blocked by it. If no other task blocked by T2: priority(T2):= original value. Highest priority task so far blocked on S is resumed.
- Transitive: if T2 blocks T1 and T1 blocks T0, then T2 inherits the priority of T0.





Example

How would priority inheritance affect our example with 3 tasks?

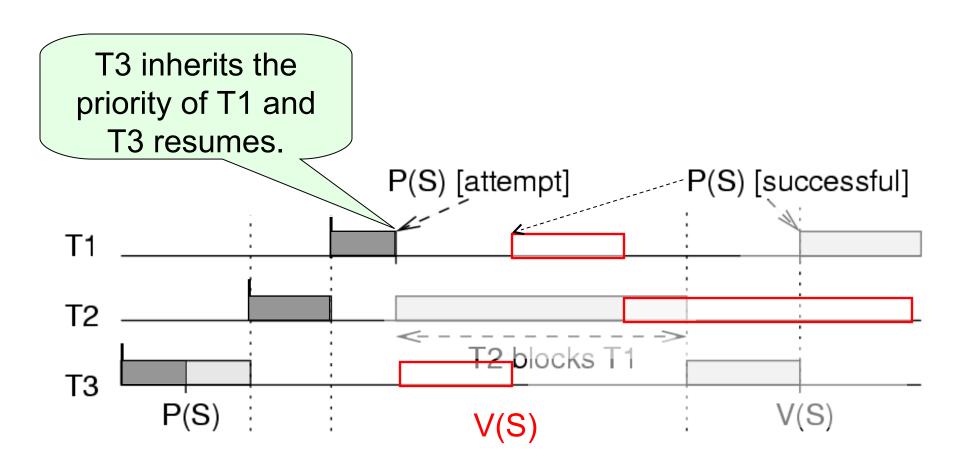





Priority Inheritance Protocol (PIP)

Example with nested critical sections:


priority does not change

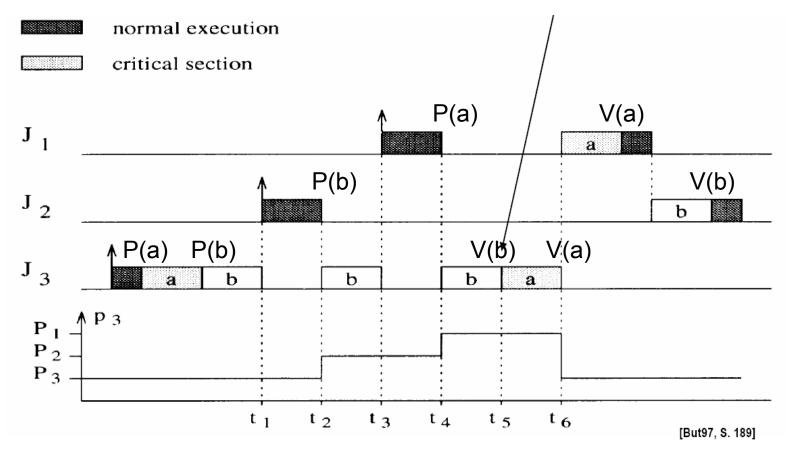




Priority Inheritance Protocol (PIP)

Example of transitive priority inheritance:

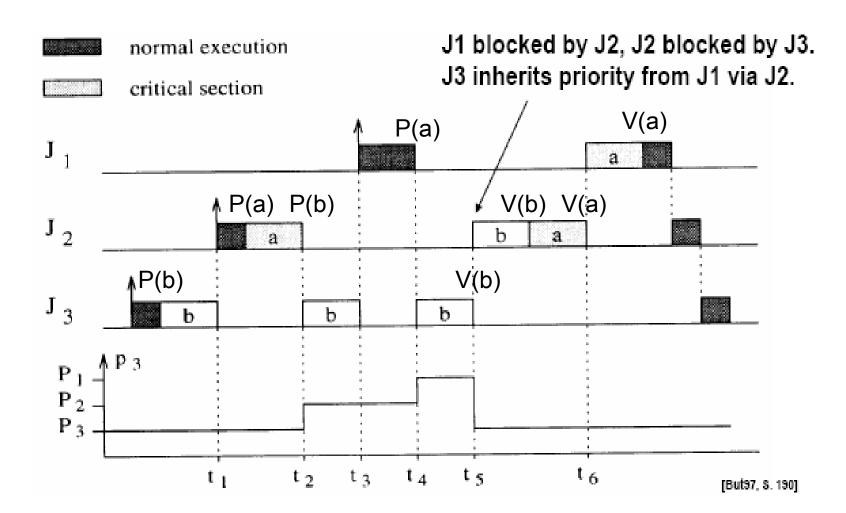







Priority Inheritance Protocol (PIP)

Problem: Deadlock

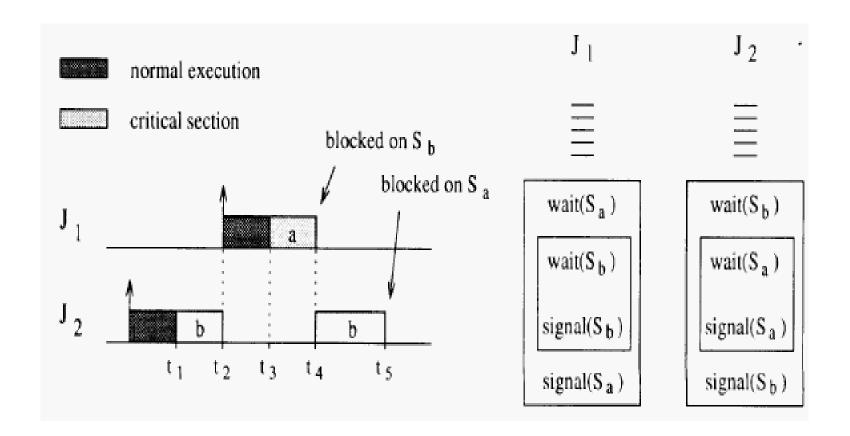

[But97, S. 200]





Priority inversion on Mars

Priority inheritance also solved the Mars Pathfinder problem: the VxWorks operating system used in the pathfinder implements a flag for the calls to mutex primitives. This flag allows priority inheritance to be set to "on". When the software was shipped, it was set to "off".

The problem on Mars was corrected by using the debugging facilities of VxWorks to change the flag to "on", while the Pathfinder was already on the Mars [Jones, 1997].





Remarks on priority inheritance protocol

Possible large number of tasks with high priority.


Possible deadlocks.

Ongoing debate about problems with the protocol:

Victor Yodaiken: Against Priority Inheritance, Sept. 2004, http://www.fsmlabs.com/resources/white_papers/priority-inheritance/

Finds application in ADA: During *rendez-vous*, task priority is set to the maximum.

Protocol for fixed set of tasks: priority ceiling protocol.





Summary

- General requirements for embedded operating systems
 - Configurability
 - I/O
 - Interrupts
- General properties of real-time operating systems
 - Predictability
 - Time services,
 - Synchronization
 - Classes of RTOSs,
 - Device driver embedding
- Priority inversion
 - The problem
 - Priority inheritance

